


Tips for replacing the gasket

- 1. Remove old gasket.
- 2. Measure the gasket and cut it on the right length. Please notice that you should cut the corners to the angle they should fit together (please see picture below).



3. Replace the gasket so that "twisted" side looks toward the frame/sash.

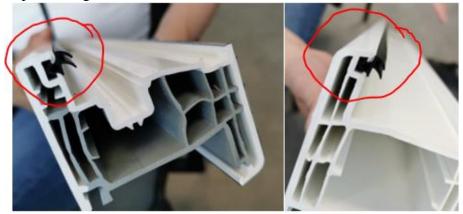

4. Use the glue for gluing the gasket corners together. The glue is suitable for UV and weather conditions.

